



Installation Instructions for Vienna Series Balustrades

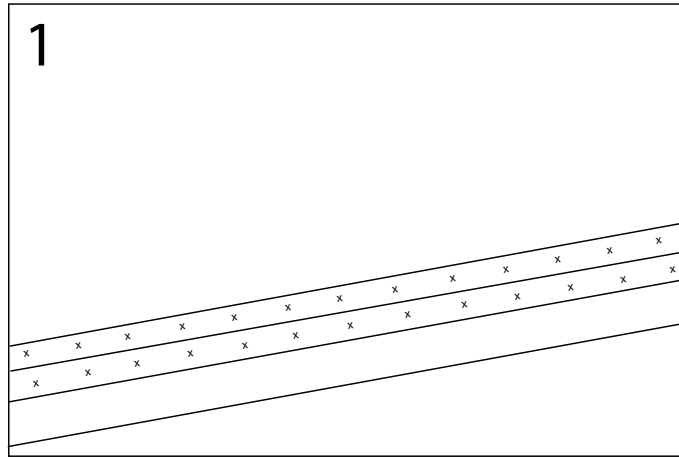


1

Cut your top and bottom 2 x 4's rails to length. Cut an additional 4" block to use as your guide for measuring the 4" on-center gap between pickets. Mark a point at the center of the bottom rail. Place one end of the 4" block on the center point and mark your 4" install points toward one end of the rail using the same process.

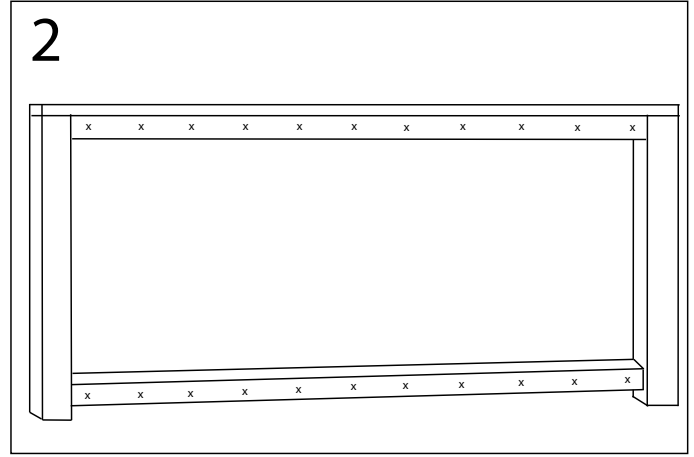


2

Design and install deck frame into desired position per local building codes. The size of the balustrade will be determined by the type of installation. In a top to bottom rail installation, the top of the top rail should be 36" from the top of the deck.

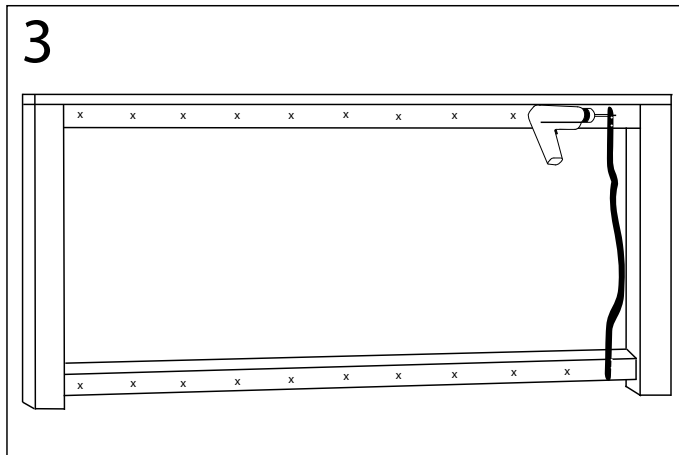

3

Install balustrades 4" on center per your install points. Local building codes may require different widths between balustrades. Using the countersunk screw hole, secure the balustrade to the top rail using 2(two) screws provided. If the screws are too long, use wire cutters to clip the ends

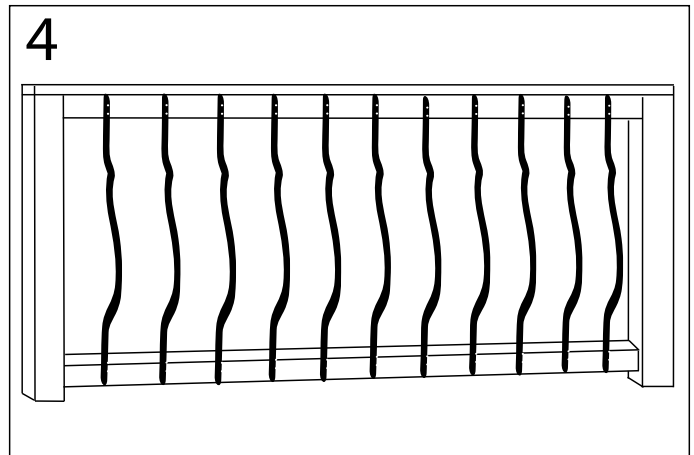

4

Be sure to wear safety glasses. If installing into the deck, use the entire length of the 2" screw provided for added strength and stability.

